

# INSTALLATION and USER'S MANUAL


## Galio Corten / Black Automatic

**Natural Gas /Propane**

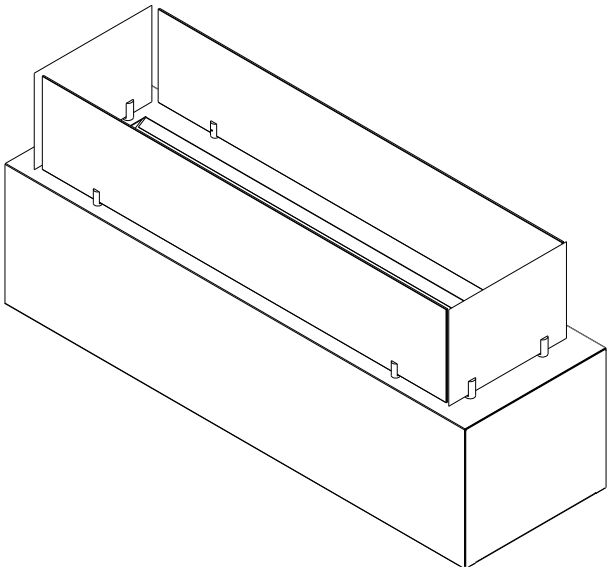



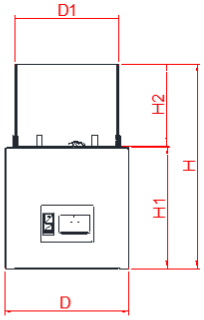

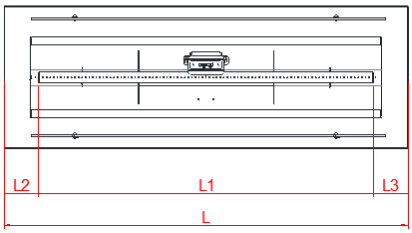
| | H | H1 | H2 | L | L1 | L2 | L3 | D |
|---|---|---|---|---|---|---|---|---|
| [mm] | 500 | 300 | 200 | 1140 | 944 | 98 | 98 | 350 |

# IT IS OBLIGATORY TO READ AND KEEP THIS INSTRUCTION MANUAL.

**TABLE OF CONTENTS**


1. INTRODUCTION ... 3
2. SAFETY INSTRUCTIONS ... 5
   2.1 Safety instruction regarding the use of the gas cylinders. ... 6
   2.2 Ventilation of cylinder compartments for cylinders exceeding 1.25 kg gas capacity ... 6
3. INSTALLATION ... 7
   3.1. Box contents ... 7
   3.2. Unboxing and installation ... 7
4. MONTAGE ... 8
   4.1. Installation of glass screens ... 10
   4.2. Installation of the gas linkage ... 10
   4.2.1. Natural gas connection ... 11
   4.2.2. Connection and replacement of the gas cylinder (LPG version) ... 11
5. OPERATING INSTRUCTIONS ... 12
   5.1. General Notes ... 12
   5.2. Setting up signal code ... 12
   5.3. Replacing the batteries ... 13
   5.4. Installation to the electricity mains (optionally) ... 14
   5.5. Remote control ... 14
   5.5.1. Setting fahrenheit or celsius ... 15
   5.5.2. Setting the time ... 15
   5.5.3. Child proof ... 15
   5.5.4. Switch the Fire ON and OFF ... 15
   5.5.5. Stand-by mode (Pilot flame) ... 17
   5.5.6. Flame height adjustment ... 17
   5.5.7. Flame height directly to minimum position ... 17
   5.5.8. Flame height directly to maximum position ... 17
   5.5.9. Countdown timer ... 18
   5.5.10. Automatic Turn Down To Pilot ... 18
   5.5.11. Automatic Shut Off ... 18
   5.6. Touchpad ... 19
6. TESTING ... 19
   6.1. Checking for gas leaks. ... 19
   6.2. Checking the flame appearance. ... 20
7. MAINTENANCE AND UPKEEP ... 20
   7.1. Testing and cleaning ... 20
8. TROUBLESHOOTING ... 21
9. PRESSURE ADJUSTMENT ... 23
10. ELECTRICAL DIAGRAMS ... 26
11. TECHNICAL SPECIFICATION ... 27
12. MANUFACTURER'S CONTACT DETAILS ... 28
13. DISTRIBUTOR'S CONTACT DETAILS ... 28

# 1. INTRODUCTION

**The Galio Corten \ Black fireplace is a decorative fuel-effect gas appliances intended only for outdoor use.** It is obligatory to acquaint oneself with the below installation manual and user's manual before committing to the installation and use of the Galio Corten \ Black fireplace. This manual is to be kept safe for the lifetime of the device.

The Planika company designs and manufactures gas devices that meet the highest standards of quality, and safety. The device meets the essential Gas appliances General requirements of the AS/NZS 5263.0:2017 and must be installed in accordance with AS/NZS 5601.

Each gas fireplace produced by Planika is subjected to factory quality control, during which it undergoes rigorous safety tests. Materials of the highest quality used for its production guarantee the user a smooth and reliable functioning of the device.

The device is delivered together with the instruction manual and assembly instructions. The assembly instructions provide the necessary information to install the device in such a way that it works properly and safely. In addition, you can find technical data about the device, information on its maintenance and possible failures that may occur, along with their possible causes and how to resolve them.

**WARNING!** The installer must be a certified and qualified specialist in gas heating and electricity and should have all the qualifications required by local law.

## CE Declaration of conformity

We hereby declare that both the design and construction of a gas heating device manufactured by **Planika Sp. z o.o. (with registered office at Bydgoska 38, 86-061 Brzoza, Poland**) meet the essential requirements contained in the Directive and the Ordinance on gas appliances.

**Product**: Gas device with decorative combustion effect for outdoor use

**Type**: Galio Insert, Galio Corten, Galio Fire Pit Insert , Galio Fire Pit Corten

**Standard**: AS/NZS 5263.0:2017

The notified body: IAPMO R&T Oceana (7-11 Fullard Road, NARRE WARREN VIC. 3805 AUSTRALIA) has issued the certificate no. GMK10583 for the above mentioned devices.

The company's quality control system guarantees that the mass-produced devices meet the essential requirements of the applicable Directives and Regulations as well as the standards contained therein. This Declaration is annulled if any modifications are made to the device without the prior written consent of Planika.

PREZES ZARZĄDU
Jarosław Dąbrowski

*Brzoza 14.11.2019*

*Chairman of the Board*

*Jarosław Dąbrowski*

**INSTALLATION NOTICE**

- The installation of this appliance is only to be carried out by an authorized person in accordance with the Manufacturer's Instructions, local gas fitting regulations, AS/NZS5601.1 installation code for gas burning appliances and any other relevant statutory regulations.
- In all cases the installation of this appliance shall meet the requirements as set out in AS/NZS5601.1

**IMPORTANT SAFETY NOTICES**

- **DO NOT PLACE ARTICLES ON OR AGAINST THIS APPLIANCE.**
- **DO NOT USE OR STORE FLAMMABLE MATERIAL IN OR NEAR THE APPLIANCE.**
- **DO NOT SPRAY AEROSOLS IN THE VICINITY OF THIS APPLIANCE WHILST IT IS IN OPERATION.**
- **DO NOT MODIFY THIS APPLIANCE.**
- **DO NOT USE ANY ADAPTOR AT THE CYLINDER CONNECTION**
- **THIS APPLIANCE IS DESIGNED TO OPERATE WITH LUMINOUS FLAMES. THIS MAY EXHIBIT SLIGHT CARBON DEPOSITS. THIS IS A NORMAL CONDITION AND IS NOT COVERED BY WARRANTY THE GUARD IS FITTED TO THIS APPLIANCE TO REDUCE THE RISK OF FIRE OR INJURY FROM BURNS AND NO PART OF IT SHOULD BE PERMANENTLY REMOVED. FOR PROTECTION OF YOUNG CHILDREN OR THE INFIRM, A SECONDARY GUARD IS REQUIRED.**


**WARNING**

This fireplace has a naked flame, care should be taken when it is operating if children or the infirm are in close proximity. A safety screen is recommended if constant supervision is not possible. It is recommended that a secondary guard complying with AS-NZS2286 be installed.

The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

## 2. SAFETY INSTRUCTIONS

- Read the instructions before using the appliance.
- Use outdoors only.
- The Galio Corten / Black fireplace should be installed and serviced annually according to the below installation manual as well as enforced national and local laws regarding gas safety (installation and use).
- One needs to assess whether the data on the product plaque complies with the local type of gas and pressure.
- Do not change the structure of the device or its sealed elements nor modify the default settings of the Galio Corten / Black fireplace.
- Do not set any additional imitation blocks nor any glowing coal fragments on the burner or in the combustion chamber.
- A CO2 or a powder fire extinguisher needs to be placed near the device.
- During the first ignition the Galio Corten / Black fireplace needs to be burnt on maximum level for a few hours in order for the elements to acquire correct temperature and for the remains of paint, lacquer and lubricant to evaporate.
- The appliance must be fixed in position and not moved.
- Galio Corten / Black has been designed for decorative purposes. The surface of the Galio Corten / Black fireplace may get hot (up to 100 degrees Celsius) with the exception of the side walls of the appliance and the control panel. **WARNING!!!** Parts of the device that are easy to reach may be very hot. Keep children away from the device.
- This appliance must be kept away from flammable materials during use. Do not place any combustible materials within a distance of 1 m of Galio Corten / Black and 2 m over the appliance (Figure 1).

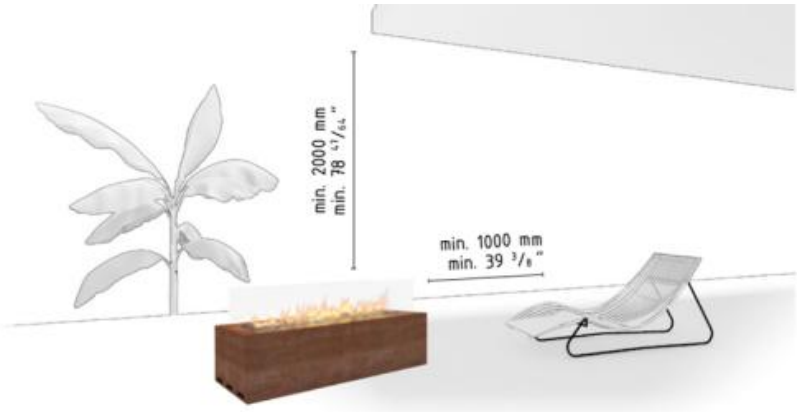


*Minimum distance to flammable materials*

- When not being used the Galio Corten / Black is to be protected from atmospheric conditions and the main valve of the gas cylinder needs to be turned off.
- If the Galio Corten / Black is not in use for a longer period of time (e.g. winter time), we advise you to protect it with a cover.
- Corrosion of the coating of the base of Galio Corten is a natural process resulting from the characteristics of the Corten steel which the fireplace is made of. It is an additional protective layer of the appliance against the negative influence of unfavorable weather conditions.
- Salty seawater environment accelerates the corrosion process and contributes to fireplace damage
- Other parts of the Galio Corten / Black fireplace are made of stain resistant material.
- Never leave a turned on Galio Corten / Black without supervision.
- The Galio Corten / Black fireplace needs to be installed in a place inaccessible for children, unauthorised persons or animals for the direct contact with the flame or hot parts of the device to be impossible.
- In case of heavy wind the Galio Corten / Black fireplace needs to be immediately turned off and one needs to await until the heavy wind passes.
- In case of noticing any sort of gas leaks the fireplace as well as the main valve of the gas cylinder need to be turned off.
- After use turn off the gas cylinder valve.

- Please retain the product packaging for the duration of the warranty period. You may need the packaging if you need to return, exchange or repair the product.

### 2.1 Safety instruction regarding the use of the gas cylinders.


- Use only the type of gas and pressure specified by the manufacturer.
- The gas cylinders should always be placed in a vertical position – during use and transport.
- Always store the gas cylinder in an easily accessible place to allow its immediate turn-off.
- During the installation process do not allow an open flame or any ignited object to reach the gas cylinder.
- The gas cylinder must be located in accordance with AS/NZS 5601 and AS/NZS 1596.
- Leaks should be found with the use of a cleaning liquid and water. If bubbles form on the surface that means that there's a leak that must be fixed before operation.
- Use only approved and certified hose and regulator assemblies, check condition before each use and replace every 2 years.
- Ensure any hoses are kept away from sharp edges and hot surfaces. Refrain from bends and twists over its full length.
- Remember that the LPG bottle should be stored in a well-ventilated place. LPG gas is heavier than air and its accumulation near the bottom surface may generate an explosive mixture.
- The gas cylinder needs to be shut if the fireplace is not being used.
- Filling the gas cylinders is to be commissioned to certified gas filling stations.
- Replacement of empty cylinders for full ones is to be conducted only in authorised locations.

### 2.2 Ventilation of cylinder compartments for cylinders exceeding 1.25 kg gas capacity

Cylinder compartments shall have permanent openings ventilating directly to the outside of the appliance and consisting of either of the following:

- Perforations, uniformly distributed over the height of the enclosure and with a total free area of not less than 25% of the sidewall area. Or
- Separate openings at high and low level, such that—
  - the total free area at high level is not less than 200 $cm^2$ and is within 125 mm of the top of the cylinder compartment; and
  - the total free area at low level is not less than 200 $cm^2$, and—
    - at least 25% of the required area is within 15 mm of the base of the cylinder compartment;
    - the total required area is within 125 mm of the base of the cylinder compartment; and
    - the openings cannot be obstructed by the cylinder(s).

A cylinder compartment shall be permanently separated from any ignition source within the appliance combustion area to prevent the ignition of escaping gas within the cylinder compartment

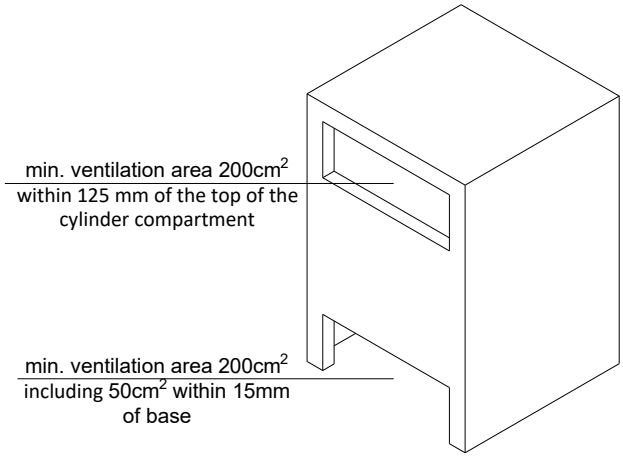

# 3. INSTALLATION

## 3.1. Box contents

- 1x complete Galio Corten \ Black gas fireplace
- 1x remote control
- 4x Tempered glass guards
- 1x Touch panel (installed)
- 4x AA Batteries
- 2x AAA Batteries
- 4x bag of decorative stones
- 1x AS/NZS 1869 hose assembly – installed (only LPG version)
- 1x pressure regulator– installed (only LPG version)
- 1x installation manual and user's manual

## 3.2. Unboxing and installation

- The contents of the boxes need to be carefully unwrapped from the foam foil.
- Remove the bags with decorative stones from the burner reservoir and place them away from it.
- Remove the Styrofoam placed on the unit.
- Carefully lift the appliance and pull out the glass shield wrapped in cardboard from the inside of the GaLiO Corten / Black.
- Check the completeness of the elements with the contents list.
- Make sure that the device nor its elements weren't damaged during the transportation (if they were, notify the supplier).
- Place Galio Corten \ Black on a flat, paved surface outside of the building, preferably on the place of final installation. Leave sufficient space on the side of the appliance where control panel is located (minimum 1 m).
- The decorative stones are to be scattered evenly around the reservoir to completely cover the burner of the fireplace.

**WARNING!!!** The stones may not cover or be placed inside the device protecting the ignition unit (Photo 1).

- It is forbidden to place any other decorative stones which are not supplied by the manufacturer.
- Delivered stones (Silicon Carbide – SiC, content 85%-95%).

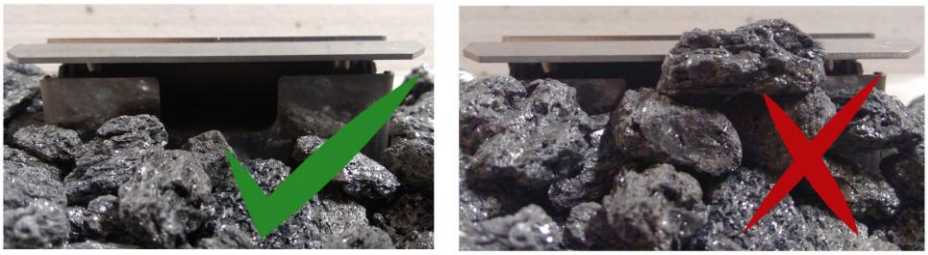


*Photo 1*

- Carefully install the primary glass guards
- In the case of Galio Corten \ Black powered with natural gas, to obtain the optimum image of the flame, cover the burner with a single layer of decorative stones leaving some spaces uncovered of approximately every 10 cm (Photo 2).



*Photo 2*

- If all the points were completed according to the instruction the gas bottle can be now connected

# 4. MONTAGE


**WARNING!!! All elements above the fireplace need to be made of non-flammable materials.**

- Select a location where the outdoor fire can be supervised during operation.
- The outdoor fire is suitable for outdoor use only and must not be used indoors.
- An isolation switch must be fitted at the appliance or on an adjacent wall to allow for emergency shutdown and maintenance.
- Installation must meet Australian gas codes AS/NZS5601.1-2013.
- Do not install under trees or overhanging branches.
- Do not install under eaves, overhang or ceilings.
- Ensure adequate space around the fire to enjoy the flame from a safe distance from the heat and flame.
- Appliance should be covered or protected in wet weather. Not suitable for use in wet or windy weather.


Only use this appliance in an above ground open air situation with natural ventilation, without stagnant areas, where gas leakage and products of combustion are rapidly dispersed by wind and natural convection.

Any enclosure in which the appliance is used shall comply with the following:

- An enclosure with walls on all sides, but at least one permanent opening at ground level and no overhead cover.
- Within a partial enclosure that includes an overhead cover and no more than two walls.
- Within a partial enclosure that includes an overhead cover and more than two walls the following shall apply.
    - at least 25% of the total wall area is completely open, and
    - at least 30% of the remaining wall area is open and unrestricted
- In the case of balconies, at least 20% of the total wall area shall be and remain open and unrestricted.
- This appliance shall not be used or installed indoors.
- The following figures are diagrammatical representations of outdoor areas

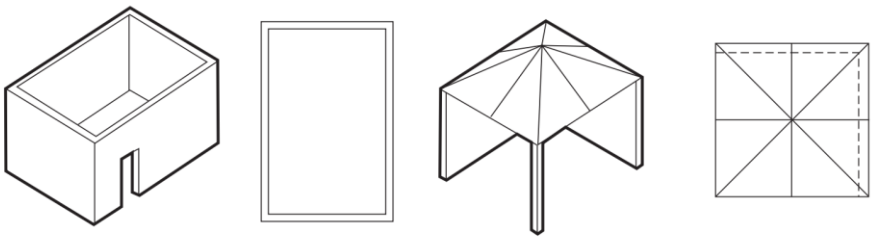

Example 1 Example 2

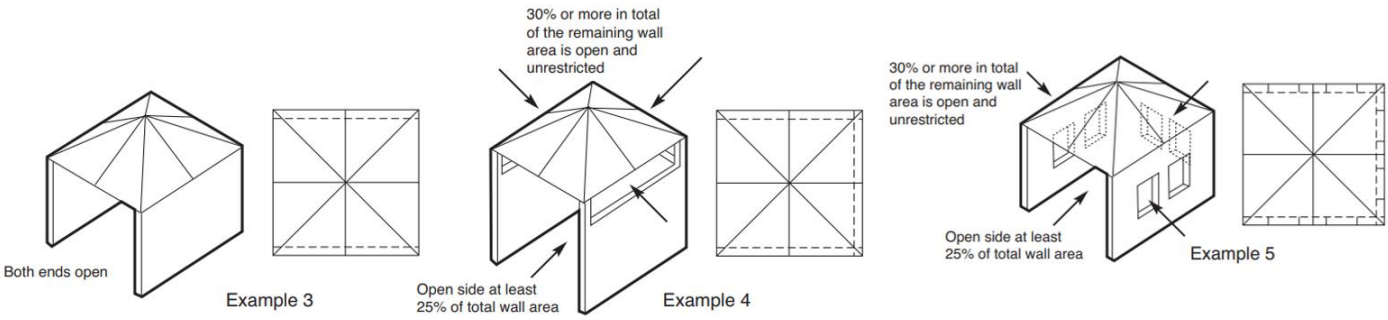

Gas fire pit minimum height must comply with:

- A gas fire pit with a burner less than 1m above the ground must be guarded to the full height of the flame such that a child aged between 2 and 6 years of age cannot gain access to the flame when assessed in accordance with IEC Guide 117.
- A guard incorporated into an appliance to comply with requirement 2 (above) must be an integral part of the appliance.

All necessary information concerning the touchable surfaces of the equipment, including the following, shall be gathered:

- Classification of surface temperatures as hot, moderate or cold
- Material and texture of the surface
- All normal operating conditions of the equipment including the setting that results in maximum temperatures of the touchable surfaces
- The probability of contact, taking into account the arm's reach of a person shown in below Figure and Table

| Age (Years) | Arm's reach in the vertical direction (see (a) of Figure measured from the floor (m) |
|---|---|
| Children from 2 years to less than 6 years | 1,5 |



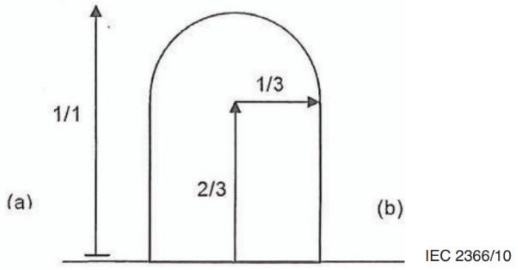



Figure - Arm's reach


The distance is interpreted as either a fully stretched person (a) or a person reaching for an item (b)

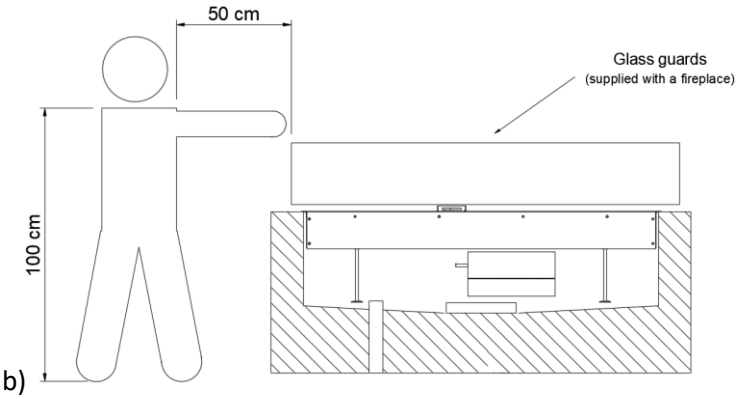


- Use construction materials to build solid base for the fireplace (non-combustible are not required)
- Make sure the surface of the base is well levelled
- Provide the gas connection under the fireplace in protective conduit
- Minimum size of the base with vertical height of 1500mm- full stretched person (a)

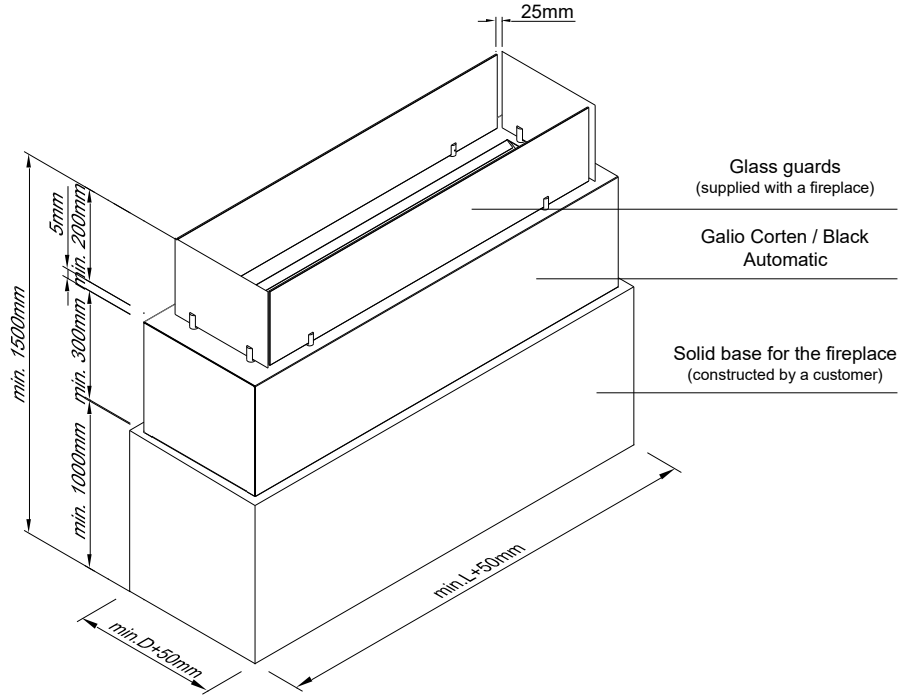

Minimum size of the base with vertical height of 1000mm- person reaching for an item (b)

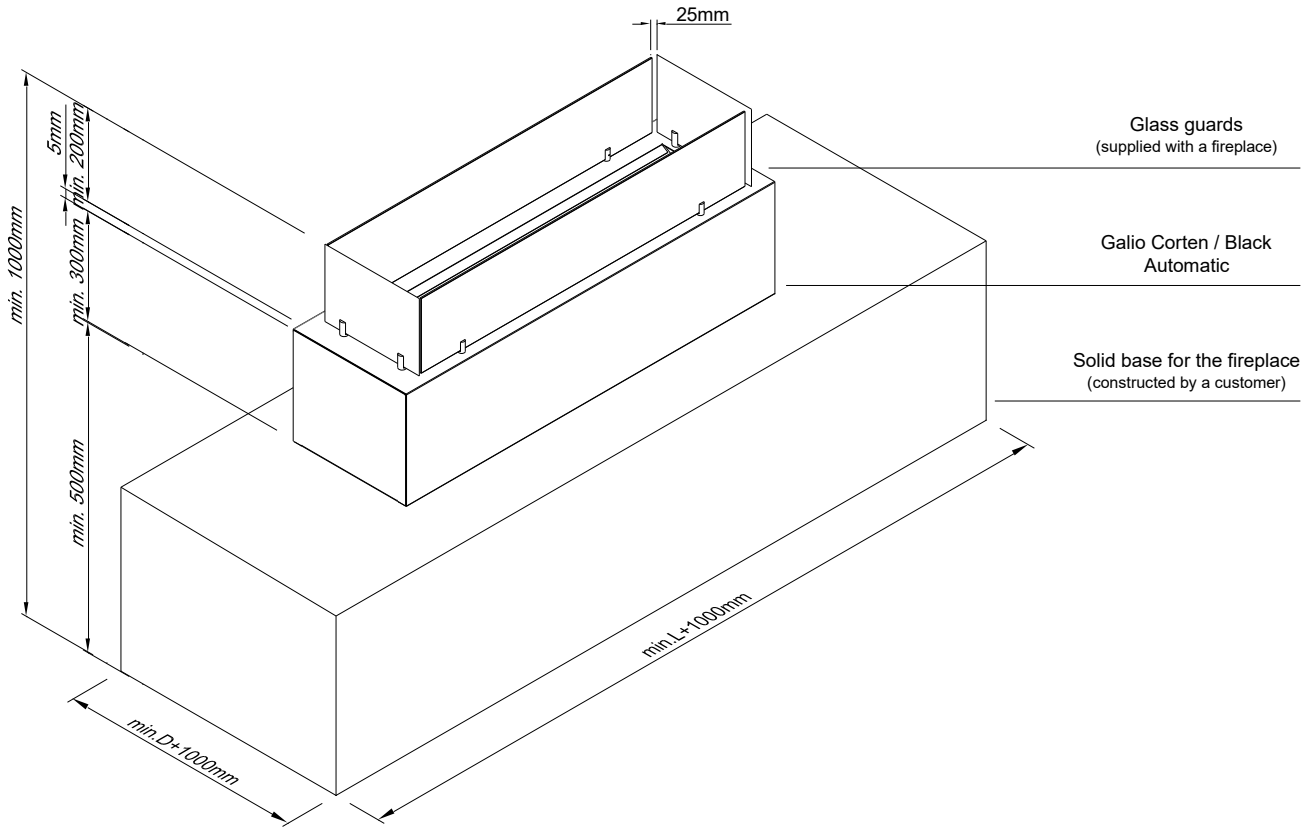


## 4.1. Installation of glass screens

- Carefully remove cardboard and foam foil from the glass guards.
- Remove all contaminations from the glass guards which could burn out on the glass during operation of the Galio Corten \ Black (in particular fingerprints).
- Install glass guards in the corresponding slots on the appliance as shown in Figure 2.

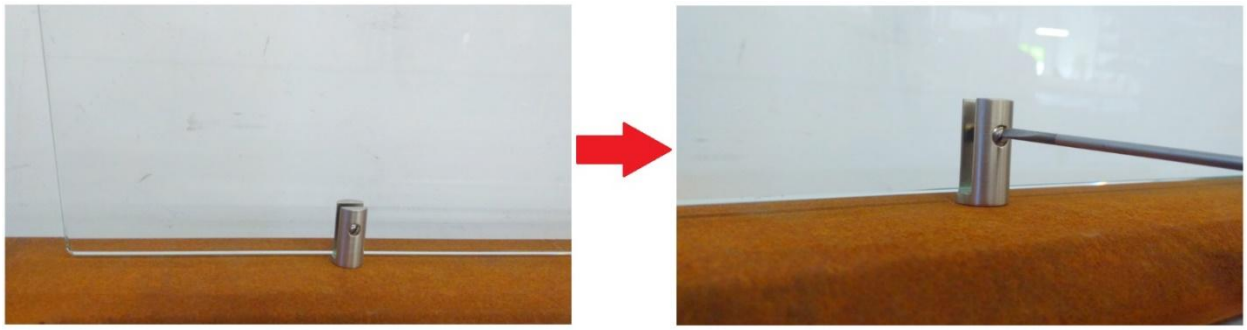


*Photo 3*

- Remove the glass guards only in case of damage of the glass.

## 4.2. Installation of the gas linkage

**Warning!!! The installation and service needs to be conducted by a qualified professional, a company or the gas supplier.**

Before proceeding with the connection of the gas cylinder to the fireplace all activity regarding the correct placement and installation of the Galio Corten / Black needs to be already performed. Place the gas piping/hose away from hot or sharp edges and make sure any flexible connections are not twisted, located out of pathways or in areas where the hose may be subject to accidental damage and installed in accordance with AS/NZS 5601.1. Gas inlet is located under the device in grey valve box.

### 4.2.1. Natural gas connection

First and foremost, make sure that the connecting device is designed to supply a gas suitable for the type placed in the gas installation. All necessary information regarding the desired parameters of the gas are found on the rating plate of the device. Before connecting the gas supply, it is necessary to blow them to remove any remaining metal filings and other contaminants from inside. Automatic gas control system should be protected from moisture and dust. These factors may cause irreparable damage to the individual components. The pipe supplying gas to the fireplace should be equipped with a ball valve with a recommended diameter of 1/2 inch. The individual elements of the gas installation cannot be sealed using Teflon tape or PTFE tape.

The gas valve on the gas pipe must be installed in accordance with applicable national regulations. Before connecting the gas, make sure that the gas pipes and connections have no dirt. Gas connection is finished with external thread 3/8 ". Regarding gas connection, the following requirements shall apply:

• You must use the gas pipe with the correct dimensions, so there is no pressure loss.

• Ball gas valve should be installed in an easily accessible place and have the necessary CE mark.

### 4.2.2. Connection and replacement of the gas cylinder (LPG version)

The Galio Corten \ Black is delivered together with an AS/NZS 1869 certified hose assembly which, on one end is connected to the valve of the appliance and on the other end to the AS 4621 certified 2.75kParegulator (LCC27 connection) ready to be connected to the gas cylinder. The hose and regulator assembly must be checked at each time a new cylinder is connected, for any damage or deterioration such as cracks, cuts, abrasions. If in any doubt contact the place of purchase for a suitable replacement.

The Galio Corten \ Black fireplace is suitable for use with 4.5kg-9kg propane cylinders.

**WARNING!!!** NEVER use an unstable gas connection or a regulator for other gas pressure.

Where an AS/NZS 1869 certified hose assembly is connected to piping ensure it is protected during servicing with a restraint chain/tether 80% of the hose length.

# 5. OPERATING INSTRUCTIONS

## 5.1. General Notes

The Galio Fire Pit Corten fireplace has a remotely control valve with a built-in ignition for the pilot flame. The flame height of the main burner may be appropriately regulated by Touch Panel or remote control.




*Hand-held transmitter and Touch Panel*


## 5.2. Setting up signal code

**WARNING!** You only need to set up the signal code once. It is not necessary when changing the batteries of the hand-held transmitter or receiver. **The appliance is delivered already configured and ready to work.**

**In case of lost or damaged** of hand-held transmitter the new one has to be programmed and the receiver must first learn the hand-held transmitter's signal code before the first use.

Press and hold the receiver's reset button until you hear two (2) beeps. After the second, longer beep, release the reset button.

Within the subsequent 20 seconds press the button „ ⏬ " on the handset. "CONN" and a running number from 1 to 8 are displayed on the handset confirming the synchronization and data exchange is in process Two (2) short beeps confirm the code is set. After successful synchronization the current state of the gas fire is displayed on the handset.

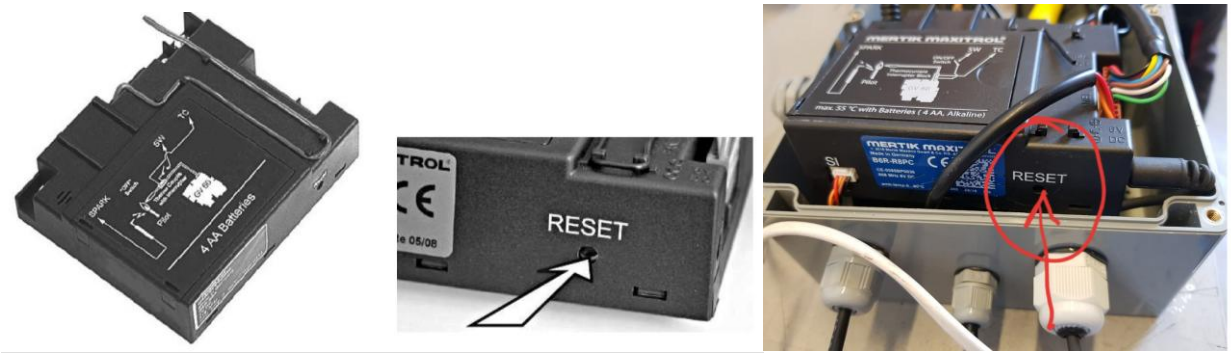


*Receiver "RESET" button*

## 5.3. Replacing the batteries

If the batteries are inserted incorrectly, the electronics or drive may be irreparably damaged. Only replace the batteries when the appliance has been completely switched off.

**NOTE:** If the appliance is equipped with a 230 VAC connection, no batteries are present in the receiver or in battery box.

- The batteries are placed battery holder located at the bottom of Galio Fire Pit Corten. (See Photo 5).



*Receiver batteries containers*

- Unscrew the cover of the battery container with a screwdriver and remove the battery box outside




*Removing of the battery container*

- Unscrew the cover and replace the batteries in the container.

**WARNING!** Remember about proper polarization of the batteries.




*Replacing the batteries in the container*




- Screw the cover back and place container back.


## 5.4. Installation to the electricity mains (optionally)

**Before any action contact with local dealer or producer as opening the valve box cause warranty lost.**

- Determinate the location for the power socket. Use waterproof socket to protect in against humid.
- Open the sealed valve box located under the fireplace
- Unplug the battery cable and connect the 6V DC power adapter to the receiver The other end of the adapter connect to the power socket. (Use only power adapter supplied by the producer).
- Lead the cable in protective conduit (min. 2cm diameter) in a way that it would be easily removable.

Notice that conduit will not be supplied by the producer.

- Make sure the rubber seal is located in proper way and close the cover of the valve box back

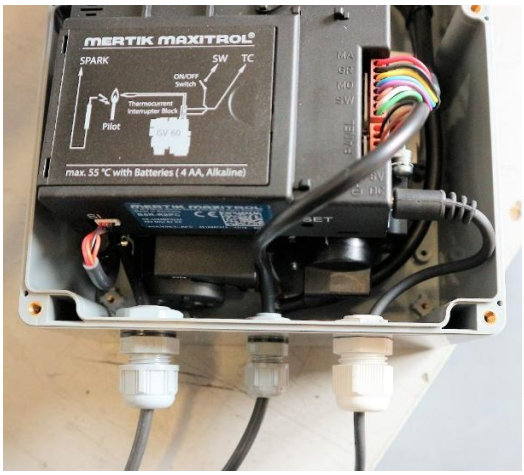




## 5.5. Remote control

Galio Corten / Black can be operated by radio remote control. This comprises a hand-held transmitter and a receiver. The receiver is part of the gas control block assembly.

- Electrical connections and batteries:
  - Hand-held transmitter: 2x 1.5V AAA battery
  - Receiver: 4x1.5V AA battery or 6 VDC

**WARNING!** Without using a mains adapter, battery replacement is recommended at the beginning of each heating season. Old or dead batteries should be removed immediately. If left in the unit the batteries can overheat, leak, and / or explode. Do NOT expose batteries (including during storage) to direct sunlight, excessive heat, fire, moisture, or severe impact. Each of these conditions can cause the batteries to overheat, leak, and / or explode. Batteries must be kept within their recommended temperature limits. Ambient battery temperature range: 32 °F to 131 °F[0 °C to 55 °C].

- The hand-held transmitter batteries have a service life of approx. one year. We recommend you use alkaline batteries. Rechargeable batteries are not permitted.
- To replace batteries:
  - Open the cover on the back of the remote control.
  - Remove the batteries from the battery compartment.
  - Place two new 1.5V batteries (LR03 or AAA type) as indicated in the battery compartment.
  - Close the cover


### 5.5.1. Setting fahrenheit or celsius




a. To change between °C and °F, press and buttons simultaneously.

**NOTE:** Choosing °F results in a 12 hour clock. Choosing °C results in a our clock.

### 5.5.2. Setting the time

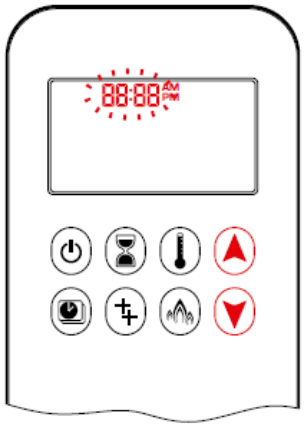


1. Press and buttons simultaneously. **Day** flashes.
2. Press or button to select a number to correspond with the day of the week (e. g. 1 = Monday, 2 = Tuesday, 3 = Wednesday, 4 = Thursday, 5 = Friday, 6 = Saturday, 7 = Sunday).
3. Press and buttons simultaneously. **Hour** flashes.
4. To select hour press or button.
5. Press and buttons simultaneously. **Minutes** flash.
6. To select minutes press or button.
7. To confirm press and buttons simultaneously or wait.

### 5.5.3. Child proof




ON:

1. To activate press and buttons simultaneously. displayed and the handset is rendered inoperable, except for the off function.


OFF:

2. To deactivate press and buttons simultaneously. disappears.

### 5.5.4. Switch the Fire ON and OFF

Before operating make sure MANUAL knob on the GV60 valve is in the **ON**, full counter clockwise position.

**WARNING!** When the pilot light is ignited, the motor turns automatically to maximum flame height. If the pilot flame goes out for any reason, wait for 5 minutes before attempting to re-light it. If the pilot does not stay lit after several tries, turn the main valve knob to **OFF.**

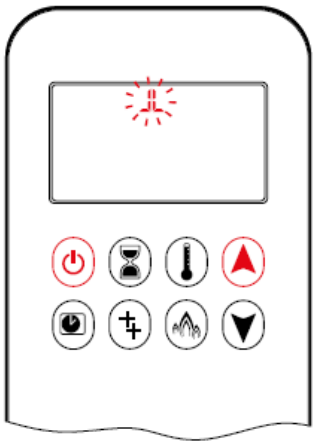

1. Open the valve of the gas cylinder (or gas supply valve in the gas pipe).
2. Press button (One Button Ignition) or and button simultaneously (Two Button Ignition) until two short beeps and a blinking series of lines confirms the start sequence has begun; release button(s).
3. Main gas flows once pilot ignition is confirmed.
4. Handset automatically goes into Manual Mode after main burner ignition.
5. Press button to turn OFF.
6. **NOTE:** A new ignition is possible after the OFF icon stops flashing.


- This can take few seconds to ignite to pilot flame especially when you have replaced and installed a new LPG gas cylinder.
- If the pilot light does not ignite after 3 ignition attempts close the gas tap and warn the fitter.
- Once the pilot light is burning, the main burner must ignite within 10 seconds automatically. If this does not happen, immediately close the gas tap and warn the fitter.
- If the main burner ignites with a pop immediately close the gas tap and warn the fitter.
- If the appliance is not to be used for some time, please close the gas supply valve in the gas pipe (or valve of the gas cylinder).
- **WARNING!** If the pilot flame goes out for any reason wait for 5 minutes before attempting to re-light it.

**WARNING!!!**

- Under conditions of increased humidity (rain, breeze, fog, dew, etc.), there may be some temporary problems with switching on the fireplace. This is a normal phenomenon associated with the dampening of the ignition element.
- Before switching on the fireplace, wait until the ignition element has dried completely.
- You can speed up this process by blowing the pilot flame with compressed air to remove the accumulated moisture. The properly fired pilot flame consist of 3 smaller parts.



### 5.5.5. Stand-by mode (Pilot flame)

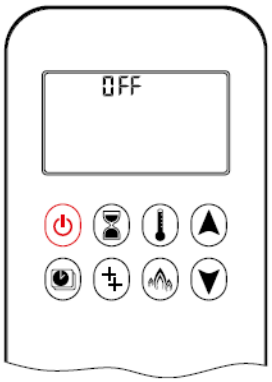



1. Press and hold ▼ button to set appliance to pilot flame.

### 5.5.6. Flame height adjustment




1. To increase flame height press and hold ▲ button.
2. To decrease flame height or to set appliance to pilot flame, press and hold ▼ button.


### 5.5.7. Flame height directly to minimum position

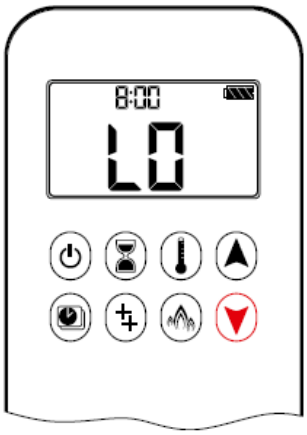


1. To go to low fire, double-click ▼ button. LO is displayed.


**NOTE:** Flame goes to high fire first before going to low fire.

### 5.5.8. Flame height directly to maximum position

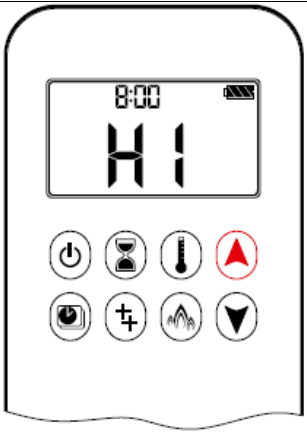


1. To go to high fire, double-click ▲ button. HI is displayed.

### 5.5.9. Countdown timer

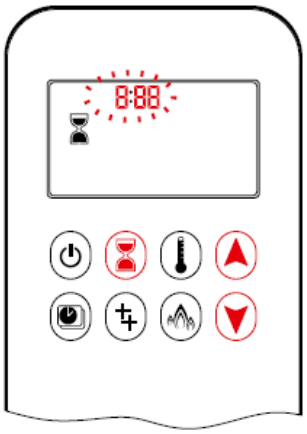


ON / SETTING:

1. Press and hold button until displayed, and **hour** flashes.
2. To select hour press or button.
3. To confirm press button. **Minutes** flash.
4. To select minutes press or button.
5. To confirm press button or wait.

OFF:

Press button, and countdown time disappear.

### 5.5.10. Automatic Turn Down To Pilot

**3 Hour No Communication Function**

The valve will turn to pilot flame if there is no communication between handset and receiver for a 3 hour period. The fire will continue to function normally when communication is restored.

**Receiver Overheating**

- Powered by mains adapter: The valve turns to pilot flame if the receiver temperature is higher than 176 °F (80 °C). If batteries are installed in the receiver in this configuration the temperature must not exceed 60 °C.
- Powered by batteries and/or connected to the V module: The valve turns to pilot position if the temperature in the receiver is higher than 140 °F (60 °C).

**NOTE:** When the receiver temperature is below 140 °F (60 °C), the main burner can be turned ON manually.

### 5.5.11. Automatic Shut Off

**Countdown Timer**

At end of countdown time period, the fire shuts off. The Countdown Timer only works in Manual, Thermostatic, and Eco Modes. Maximum countdown time is 9 hours and 50 minutes.

**Low Battery Receiver**

The system will shut down the fire completely if the batteries reach a low power level while burning. This will not happen if the burner is connected to the optional mains adapter and power is lost

**On-Demand Pilot**

- This green feature eliminates gas energy consumption during extended appliance inactivity. When the appliance is inactive for an extended period of time the system automatically extinguishes the pilot. This feature helps the consumer realize cost benefits by automatically eliminating energy consumption during non-heating months and limited use.
- The programmed length of inactivity to activate the system is specified by the appliance manufacturer and cannot be altered in the field.

### 5.6. Touchpad

Depending on customers preferences GaLiO Corten may be additionally operated Touch panel.




*Touch panel*

**To Turn ON Appliance**

- Press ON-OFF button until two short beeps confirm the start sequence has begun; release button.
- Once pilot ignition is confirmed, there is main gas flow.

**Standby Mode (Pilot Flame)**

- Press and hold DOWN (small flame) button to set appliance at pilot flame.

**To Turn OFF Appliance**

- Press ON-OFF button.

**Flame Height Adjustment**

- Press and hold UP (large flame) button to increase flame height.
- Press and hold DOWN (small flame) button to decrease flame height or to set appliance at pilot flame

## 6. TESTING

**WARNING!!! NEVER TURN ON THE DEVICE IF THE CHARACTERISTIC SMELL OF GAS IS PERCEPTIBLE.**

If you smell gas during the operation of the fireplace turn off the device immediately and cut off the gas supply from the gas cylinder by shutting its valve.

### 6.1. Checking for gas leaks.

- Check if all connections are airtight.
- To do that apply all connections with soapy water (or water with another foamy substance) or with a professional spray for leak detection.
- If air-bubbles are present that means the connection has a leak.
- Remove the leaks in the identified spaces.
- Check for leaks once again.
- After the inspection dry the inspected connections.
- The device may only be used again after all leaks are removed.
- **If the problem happens again please contact the dealer.**

### 6.2. Checking the flame appearance.

- Burn the Galio Corten \ Black on max flame height and check the appearance of the flame. Ensure test point pressure is as per the data plate on the appliance and at the end of this manual.
- The flame should be linear and evenly placed on the whole length of the main burner.
- If visible gaps are present or there are substantial differences in flame height turn off the fireplace and after the device is cooled adjust the placement of decorative stones in such a way for them to be evenly placed on the whole surface of the main burner.

**WARNING!!!** Stones must not cover the area between the burner and pilot cover, which houses the ignition and the pilot flame.

- Turn on the fireplace and check the appearance of the flame once again.

## 7. MAINTENANCE AND UPKEEP

We recommend cleaning the pilot flame and the main burner unit before the device is started again and after long intervals of inactivity.

### 7.1. Testing and cleaning

Please check and clean as necessary:

- The main burner - if necessary, remove broken parts of stones and dust.
- Pilot burner and thermo-couple (if necessary, remove the existing sediment). In the event of visible damage contact your dealer.
- Igniter - gap between igniter and pilot flame should not be bigger than 5 mm.
- Gas hose and pressure regulator (in case their expiry date is invalid replace these ancillaries for new ones).
- If you encountered problems with the regulator, gas hose, burner or regulation valves do not try to fix these parts. Contact your place of purchase, an authorised service or an importer in order to acquire genuine spare parts. To ensure the device is working efficiently use only original spare parts.
- Ensure controls, burners and circulating air passageways of the appliance are kept clean for safe operation.

## 8. TROUBLESHOOTING

**Warning! Installation, upkeep and service need to be conducted by a qualified professional with appropriate qualification, an appropriate company or the gas supplier.**

| PROBLEM | POSSIBLE CAUSE | CORRECTIVE ACTION |
|---|---|---|
| **SMELL OF GAS** | **CLOSE THE VALVE ON THE GAS CYLINDER IMMEDIATELY. DO NOT USE THE DEVICE UNTIL LEAKS HAVE BEEN REMOVED.** | |
| Leak detected at cylinder, regulator or other connection. | 1. A loose regulator linkage.<br>2. Leak in the gas linkage, in the regulator or on the gas knobs. | 1. Tighten and test it.<br>2. Report this issue to service. |
| Burner does not ignite | 1. The bottle is empty.<br>2. Igniter linkage is not connected.<br>3. No ignition spark.<br>4. The igniter electrode is placed incorrectly opposite the igniter.<br>5. Gas nozzles are blocked.<br>6. Gas linkage is twisted.<br>7. Pressure regulator link is loose. | 1. Replace Gas Cylinder.<br>2. Connect the igniter linkage.<br>3. Replace igniter.<br>4. Realign electrode and clear any surrounding debris from area.<br>5. Unmount burner, clean the nozzle.<br>6. Straighten the linkage. Keep the linkage away from the housing.<br>7. Tighten the link. Check for leaks. |
| Igniter Not Working | 1. Ignitor wire not connected.<br>2. Electrode misaligned on pilot burner<br>3. Igniter malfunction | 1. Ensure pilot electrode wire is connected.<br>2. Realign electrode and clear any surrounding debris from area.<br>3. Replace Igniter |
| Low efficiency, „cracking” sounds | 1. The bottle is empty.<br>2. The nozzles of the burner are blocked. | 1. Replace Gas Cylinder.<br>2. Unmount the burner, clean the nozzle. |
| Thumping sounds made by the regulator. | The cylinder valve has opened rapidly. | Unfasten the bottle valve slowly. |
| A vivid/ bright orange and smoky flame of the burner. | Holes blocked in the apparatus producing the gas and air mixture. | Unmount the burner and clean/ unblock the apparatus’ holes. |

There are many factors that may affect the malfunction of the gas insert. To exclude a possible fault in the unit or the automatic gas control system, make sure that the fireplace is connected according to these instructions.

Below table summarizes possible failures that may occur, possible causes and ways to solve them.


| Failure code | Message shown in app | Description | Possible cause |
|---|---|---|---|
| F02 | F02<br>Contact Service. | Wiring Motor and/or Microswitch. | No Motor end stop found Wiring to Motor<br>Microswitch connection or function<br>Bent Motor Knob |
| F03 | F03<br>Contact Service. | Thermocouple wiring wrong or interrupted, or kill switch open. | Thermocouple wiring wrong or interrupted<br>ON/OFF switch at Valve open |
| F04 | F04<br>Ignition Sequence Malfuntion.<br>Wait 1 minute.<br>Retry ignition. | No pilot flame within 30 sec;<br>Remark: after 3 times failure F06 will be created. | No gas supply<br>Air in pilot supply line<br>No spark<br>Wrong polarity in Thermocouple wiring |
| F06 | F06<br>Contact Service. | No pilot flame within 30 sec for 3 times within 5 Minutes. | No gas supply<br>Air in pilot supply line<br>No spark<br>Wrong polarity in Thermocouple wiring |
| F10 | F10<br>Contact Service. | 2nd Thermocouple did not sense flame. | Logs out of position |
| F12 | F12<br>Contact Service. | Limit temperature exceeded (T> 60 °C); Motor turns down to pilot. | V Module connected<br>Receiver equipped with back up batteries |
| F13 | F13<br>Contact Service. | Limit temperature exceeded (T> 80 °C); Motor turns down to pilot. | V Module not connected<br>Receiver not equipped with back up batteries |
| F14 | F14<br>Contact Service. | Receiver software doesn't support a 2nd Thermocouple. | Wrong Receiver type |
| F15 | F15<br>Contact Service. | 2nd Thermocouple is not connected to the Receiver. | - Wiring of 2nd Thermocouple not connected or damaged |
| F16 | F16<br>Handset out of range. | No temperature value from Handset found for 1,5 h. | No Handset in range |
| F17 | F17<br>Contact Service. | Measure range malfunction Vcc > 7,25 V. | Wrong or malfunctioning Mains Adapter |
| F19 | F19<br>Contact Service. | Pilot drops when Motor opens the main gas. | Not enough thermovoltage<br>Bad Thermocouple<br>Low inlet pressure Valve |

| Failure code | Message shown in app | Description | Possible cause |
|---|---|---|---|
| F26 | F26<br>Contact Service. | Motor up prohibited after ignition / Fan at level 4 for 10 minutes (T > 60/80 °C). | - Receiver temperature still above 60/80 °C |
| F28 | F28<br>5 Day Shut OFF. | 5d Timer expired or switched off at low batteries. | No Motor turn for 5 days<br>Empty Receiver batteries |
| F31 | F31<br>Contact Service. | Electronic malfunction. | Misconnection, short, high voltage<br>Overheating |
| F41 | F41<br>Check Wi-Fi. | No or bad Wi-Fi connection. | No or bad Wi-Fi connection |
| F42 | F42<br>Check Wi-Fi. | No myfire Wi-Fi box found. | No power<br>myfire Wi-Fi Box is not connected to the Home Network<br>Incorrect myfire Wi-Fi Box version |
| F43 | F43<br>No Receiver Connected.<br>Contact Service. | No Receiver connected to myfire Wi-Fi Box or bad connection. | Defect or loose wire between Receiver and myfire Wi-Fi Box |
| F44 | F44<br>Missing temperature Sensor. Contact Service. | No Temperature Sensor found (Handset or NTC) | No Handset available or no Temperature Sensor connected |

| Failure code | Message shown in handset | Duration displaying | Description | Possible cause |
|---|---|---|---|---|
| F04 | F04 | 4s | No pilot flame within 30 sec<br>Remark: after 3 times failure F06 will be created. | No gas supply<br>Air in pilot supply line<br>No spark<br>Wrong polarity in thermocouple wiring |
| F09 | F09 | 4s | The Receiver has not been paired with the Handset. | Down arrow button was not pressed during pairing |
| F40 | Battery Symbol | Permanent | Low battery power in Handset. | Replace Handset batteries |
| F46 | F46 | 4s | No or bad connection between Receiver and Handset. | No power at Receiver<br>Low communication range |

## 9. PRESSURE ADJUSTMENT

Do not attempt to remove screws from the top of gas valve. Do not change any adjustments marked with tamper indicating paint. Motor knob is not to be removed.

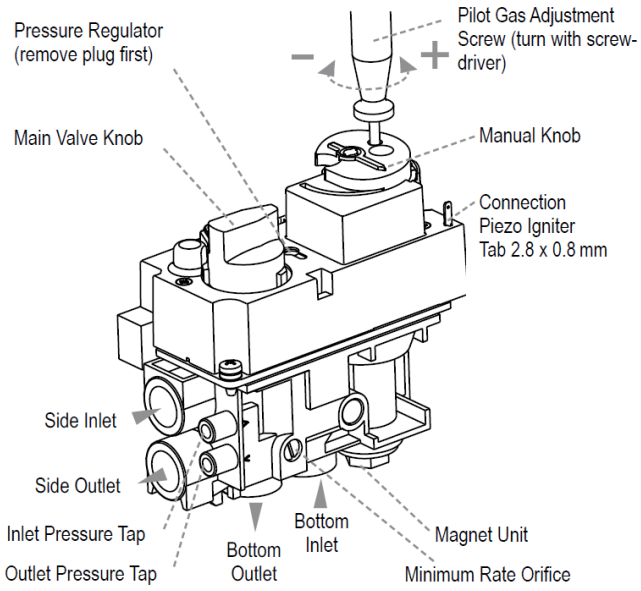



- **Pilot Flame Adjustment**

The pilot flow adjustment is preset to maximum at the factory. The pilot flame should envelope ⅜" to ½" of the thermocouple

  - The adjustment screw can be reached through a hole in the MANUAL knob
  - Turn the MANUAL knob to the ON position.
  - It is now possible to pierce through a film on the cover with a screwdriver to reach the adjustment screw beneath.
  - Turn the adjustment screw clockwise to decrease or counterclockwise to increase pilot flame.


- **Outlet Pressure Adjustment (High Fire)**
  - Connect a pressure manometer to the valve outlet pressure tap. Pressure tap is opened by turning the screw counterclockwise. Pressure regulator or throttle are located under the cover and can be reached by removing the plug
  - Turn MANUAL knob and main valve knob to the ON position.
  - Turn pressure regulator adjustment screw to set required burner pressure (high fire). Pressure is increased by turning clockwise (pressure regulator models), or decreased by turning counterclockwise: LPG 1kPa, NG 0.81kPa

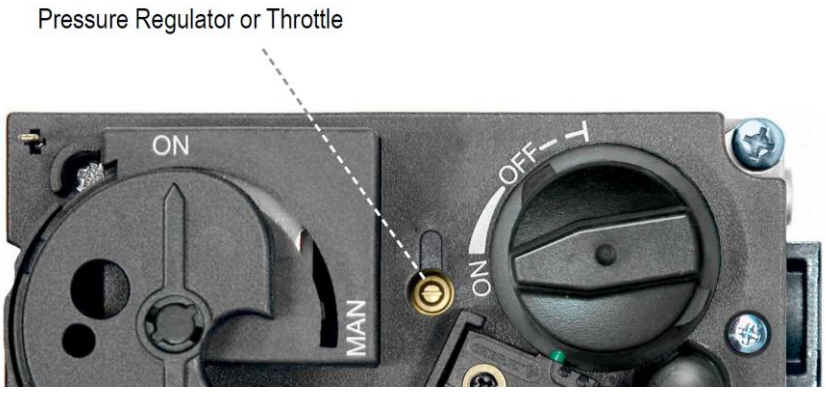


  - After adjustment, replace the plug.
  - If no other adjustments are required, close pressure tap(s) by turning the screw(s) full clockwise. Check all connections/pressure tap(s) for leaks.


- If the desired outlet pressure or flow cannot be achieved by adjusting the gas valve, check the gas valve inlet pressure using a manometer at the valve inlet pressure tap. If the inlet pressure is in the normal range, replace the gas valve; otherwise, take necessary steps to assure proper gas pressure to the valve

- **Minimum rate Adjustment**
  - Connect a pressure manometer to the valve outlet pressure tap. Pressure tap is opened by turning the screw counterclockwise. Minimum rate adjustment screw is located on the top of the metal valve body.
  - Turn minimum rate adjustment screw to set required burner pressure (minimum fire). Pressure is increased by turning clockwise (pressure regulator models), or decreased by turning counterclockwise: LPG 0.62kPa, NG 0.37kPa

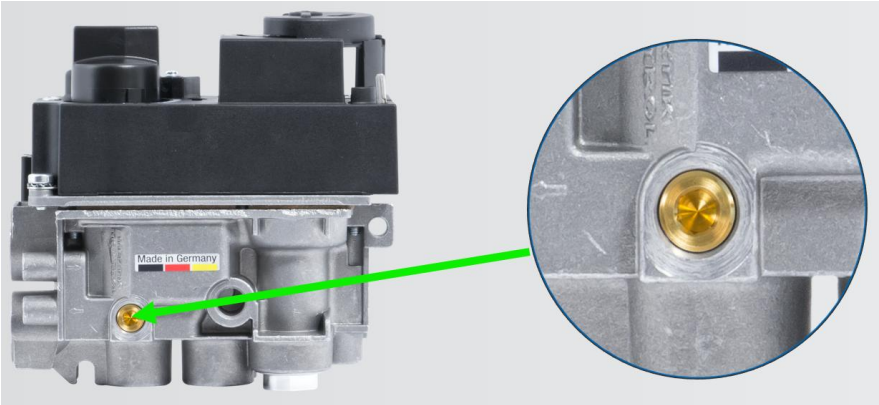



**Warning! You should never connect any device adapted to the combustion of liquefied gas to the gas network of natural gas and vice versa.**


- **Pressure reading**
  - Unscrew gas valve box cover using cross screwdriver.

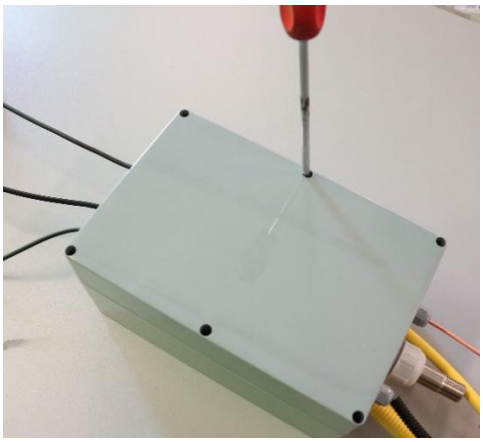


  - Take off the cover.

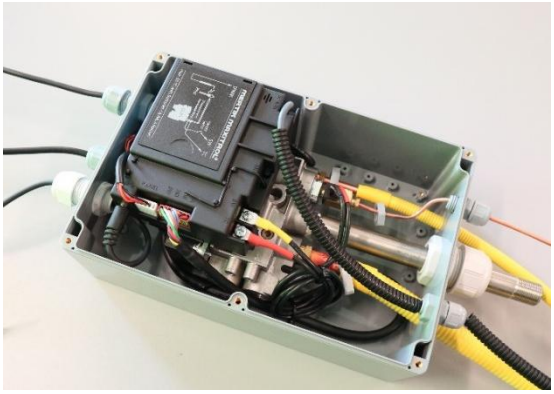


- Slightly take out the valve unit from valve box
- Unscrew the screw on the test tap by half a turn.
    A) Inlet pressure tap
    B) Outlet pressure tap

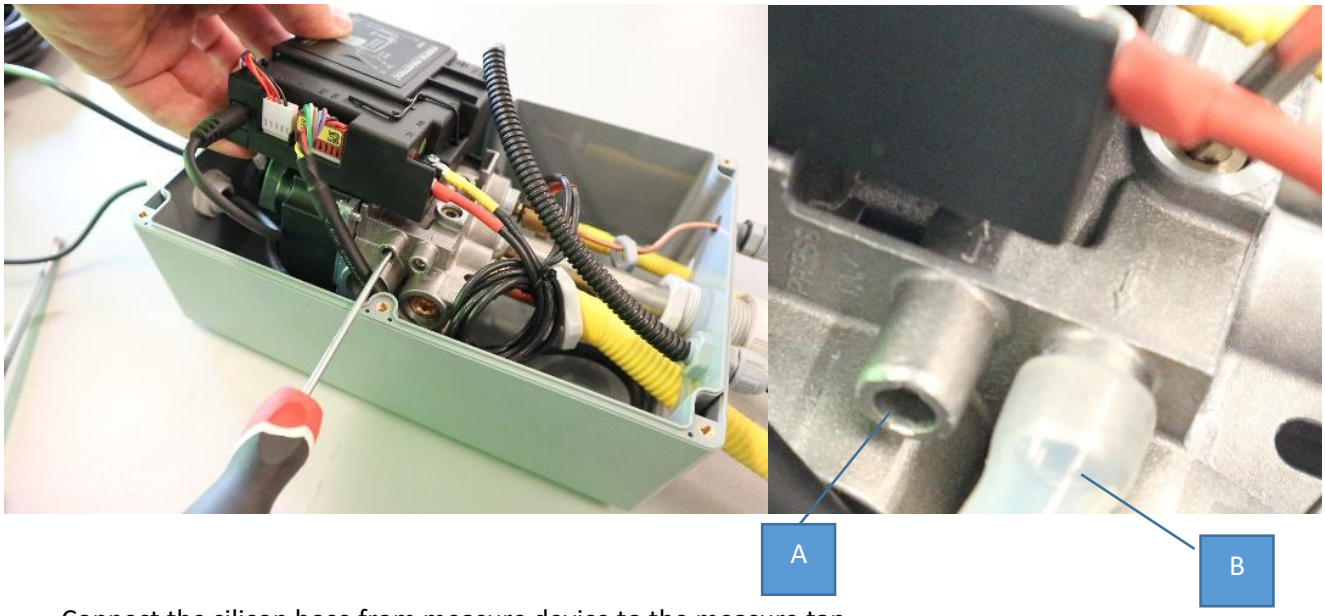


- Connect the silicon hose from measure device to the measure tap.

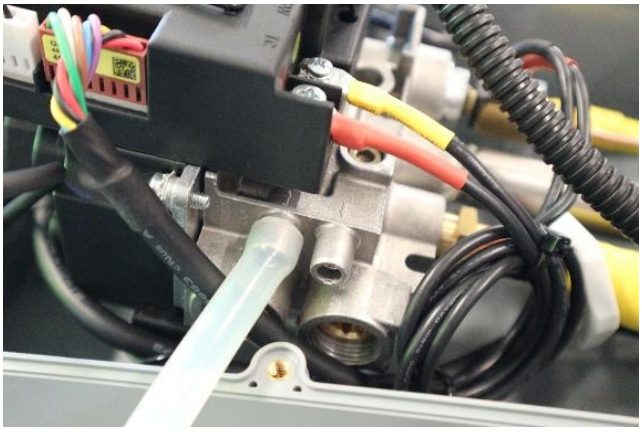


- Read the pressure value. Pressure test has to be made when fireplace is turned on with the highest flame level.

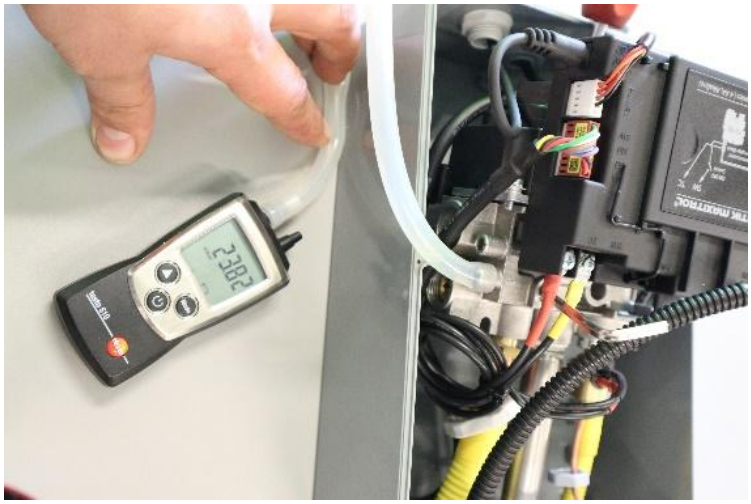

- Screw tightly the screw on the test tap
- Turn on the device and check if screw is sealed using gas detector, foam or other method.
- Put on gas valve cover and screw it back.

## 10.ELECTRICAL DIAGRAMS

**WARNING! V module is not available**

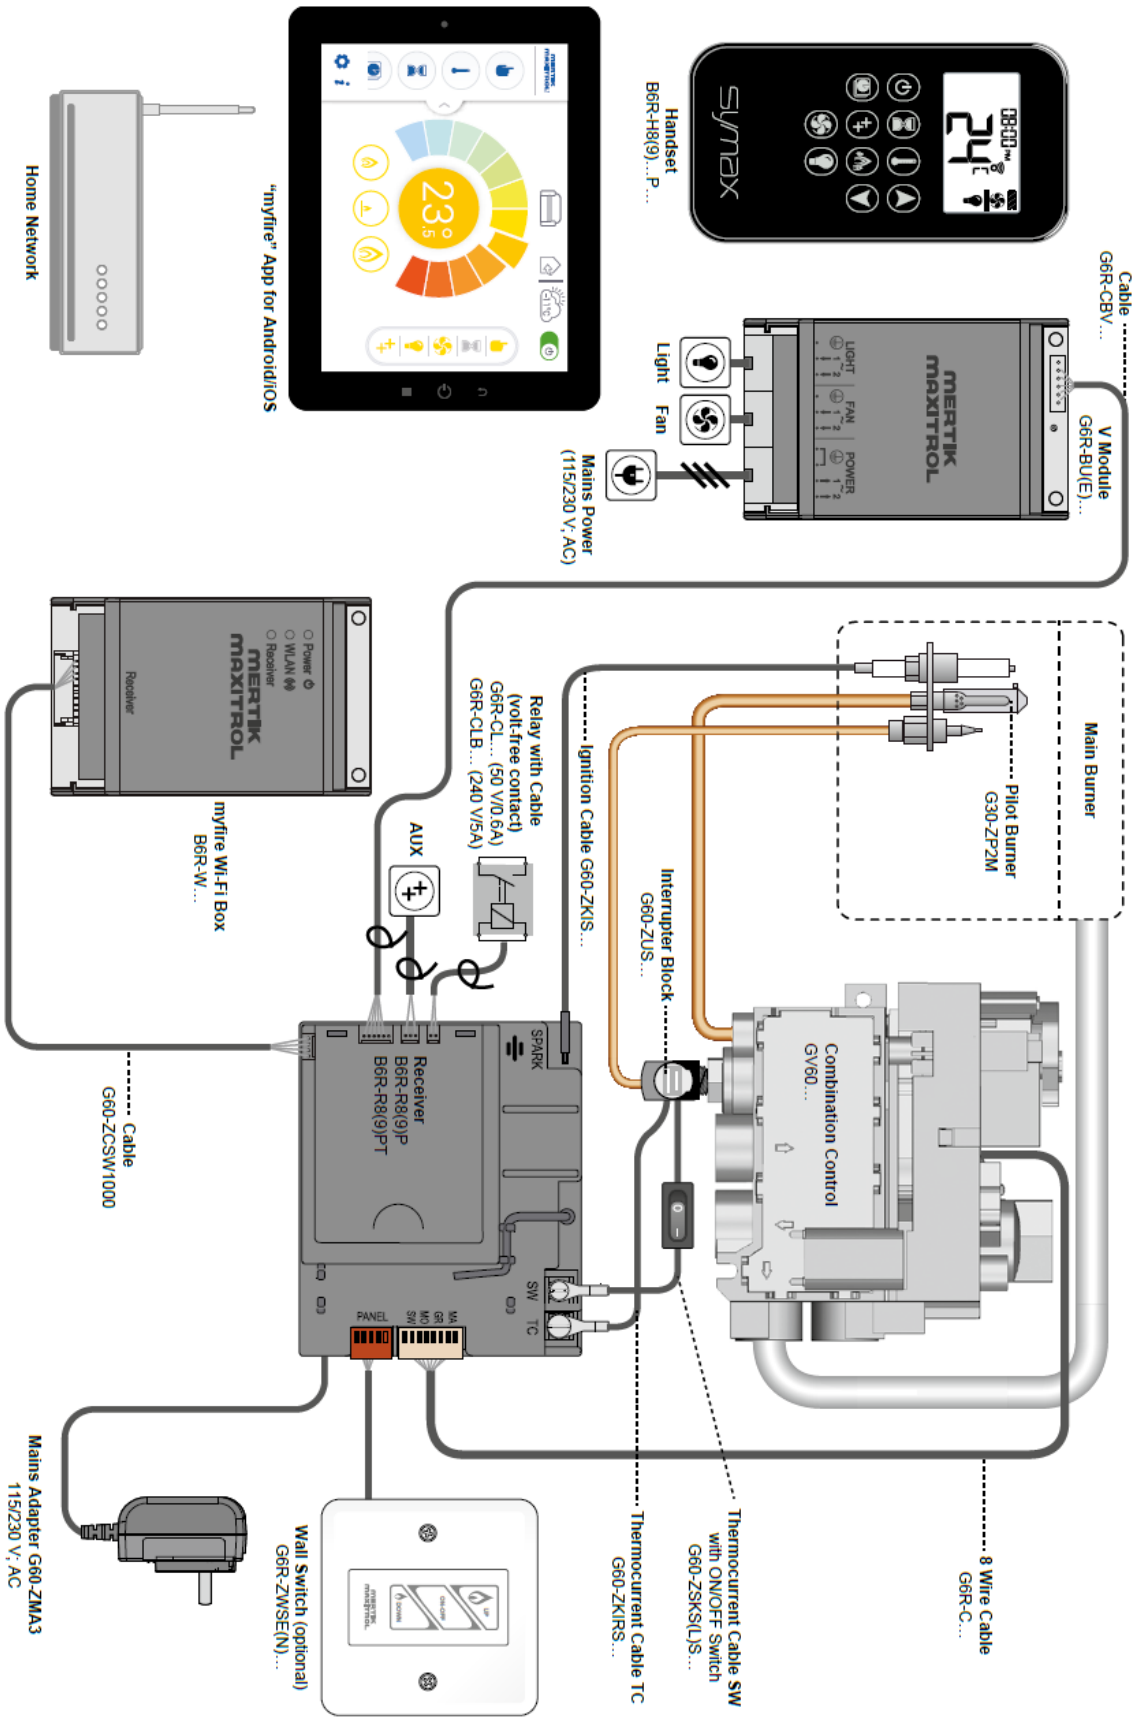

## 11.TECHNICAL SPECIFICATION

Manufactured by:

**Planika Sp. z o.o.**
**Bydgoskich Przemysłowców 10**
**85-862 Bydgoszcz**
**Poland**

DO NOT REMOVE ™ AUSTRALIA ONLY GAS SAFETY CERTIFICATION

planika INTELLIGENT FIRE

| | | |
|---|---|---|
| **GMK10583** | Model No. | Galio Corten |
| | Serial No. | FO xxxx xx |
| | Gas Type | NG |
| | Index | GO-xxxx-xx |
| | Date of Manufacture | xx/xxxx |
| | Nominal Injector Size (mm) | 2.7 |
| | Pilot flame injector (mm) | 2 x 0.2 |
| | Inlet Pressure (kPa) | 1.13 |
| | Test Point Pressure (kPa) | 0.81 |
| | Turndown Test Point Pressure (kPa) | 0.37 |
| | Nominal Gas Consumption (MJ/h) | 33.8 |
| | Turndown Gas Consumption (MJ/h) | 22.65 |
| | Primary Aeration Setting (mm) | Fully Closed |

**SUITABLE ONLY FOR OUTDOOR INSTALLATION**

**DO NOT OPERATE IN AN ENCLOSED AREA**

**DO NOT OPERATE IN AN UNVENTILATED AREA**

**DO NOT OPERATE INDOORS**

**DO NOT OPERATE THIS APPLIANCE BEFORE LEAK CHECKING HOSES AND GAS CYLINDER CONNECTION**

**TO BE INSTALLED ON FIRE RESISTANT MATERIAL**

**FOR OUTDOOR USE ONLY**

**THE INSTRUCTIONS PACKAGED WITH THIS APPLIANCE CONTAIN IMPORTANT INFORMATION ABOUT INSTALLATION AND USE**

**TO BE INSTALLED ONLY BY AN AUTHORIZED PERSON IF CONNECTING TO FIXED CONSUMER PIPING**

Manufactured by:
**Planika Sp. z o.o.**
**Bydgoskich Przemysłowców 10**
**85-862 Bydgoszcz**
**Poland**

DO NOT REMOVE ™ AUSTRALIA ONLY GAS SAFETY CERTIFICATION

planika INTELLIGENT FIRE

| | | |
|---|---|---|
| **GMK10583** | Model No. | Galio Corten |
| | Serial No. | FO xxxx xx |
| | Gas Type | LPG |
| | Index | GO-xxxx-xx |
| | Date of Manufacture | xx/xxxx |
| | Nominal Injector Size (mm) | 2.2 |
| | Pilot flame injector (mm) | 1 x 0.2 |
| | Inlet Pressure (kPa) | 2.75 |
| | Test Point Pressure (kPa) | 1.0 |
| | Turndown Test Point Pressure (kPa) | 0.62 |
| | Nominal Gas Consumption (MJ/h) | 41.2 |
| | Turndown Gas Consumption (MJ/h) | 33.45 |
| | Primary Aeration Setting (mm) | 1/2 Closed |

**SUITABLE ONLY FOR OUTDOOR INSTALLATION**

**DO NOT OPERATE IN AN ENCLOSED AREA**

**DO NOT OPERATE IN AN UNVENTILATED AREA**

**DO NOT OPERATE INDOORS**

**DO NOT OPERATE THIS APPLIANCE BEFORE LEAK CHECKING HOSES AND GAS CYLINDER CONNECTION**

**TO BE INSTALLED ON FIRE RESISTANT MATERIAL**

**FOR OUTDOOR USE ONLY**

**THE INSTRUCTIONS PACKAGED WITH THIS APPLIANCE CONTAIN IMPORTANT INFORMATION ABOUT INSTALLATION AND USE**

**TO BE INSTALLED ONLY BY AN AUTHORIZED PERSON IF CONNECTING TO FIXED CONSUMER PIPING**

## 12. MANUFACTURER'S CONTACT DETAILS

**Company Name:** **Planika Sp. z o.o.**

**Address:** **Bydgoskich Przemysłowców 10**

**Telephone:** **+ 48 52 364 11 60**

## 13. DISTRIBUTOR'S CONTACT DETAILS

**Company Name:** **OBLICA PTY LTD**
**Address:** **497 Victoria st, 3067 Abbotsford VIC, AUSTRALIA**
**Telephone:** **03 9416 0400**
**Home page:** **oblica.com.au**